


Precision Locker Company

www.precisionlocker.com

Installation: Combo Lock (9043)

1) Lock Parts

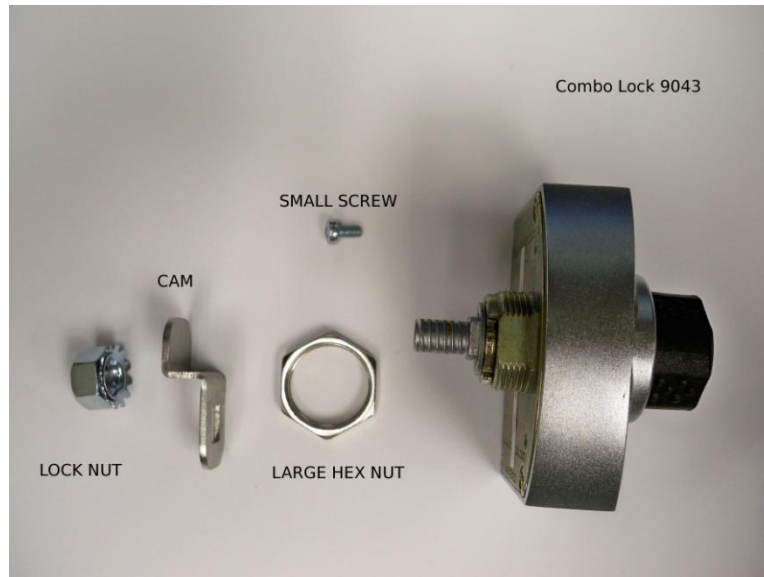

2) Insert Lock



3) Insert Small Screw



4) Install Large Hex Nut



5) Square the lock to door



6) Tighten small screw & large nut



7) Align White Arrow



8) Insert Cam



9) Install Lock Nut



10) Tighten Lock Nut



11) Assembled Combo Lock



12) Final CAM adjustment

